




GREENSTREAK GROUP, INC

SBR and Neoprene Rubber Waterstop Fittings and Adhesive Kits



SBR and Neoprene Rubber Waterstops require pre-molded fittings to accommodate splices, intersections and directional changes. SBR and Neoprene Waterstops cannot be heat welded in the manner of PVC or TPER Waterstops. Straight lengths of SBR or Neoprene Waterstops must be bonded and inserted into the pre-molded fitting to create the connection. Please review the [Rubber Waterstop Installation Guide](#) for complete details on this procedure.

In addition to straight unions, the following pre-molded fittings are available:

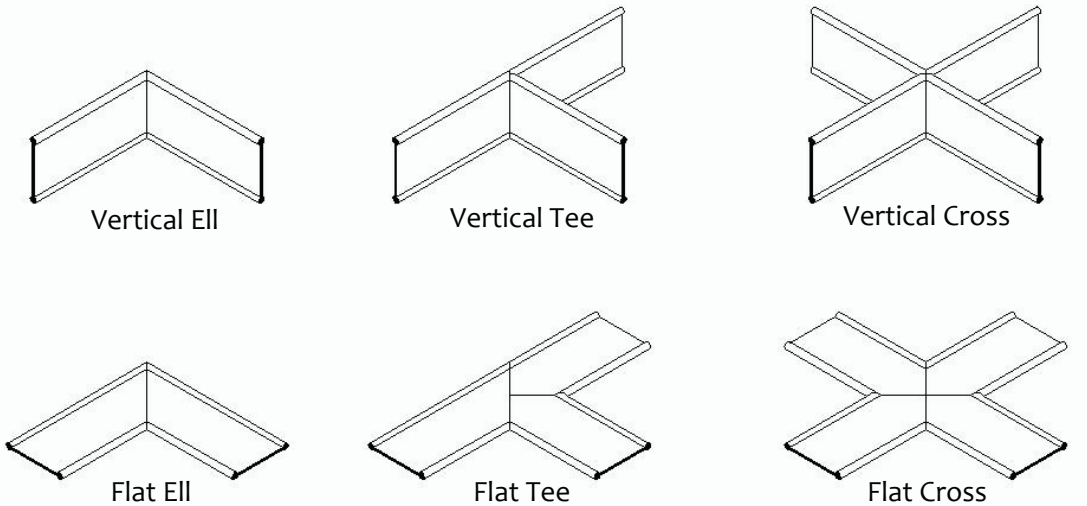

Consult Greenstreak for specific lead times on SBR or Neoprene Fittings



Bonding Kits are available with one quart or one gallon containers of adhesive.

GREENSTREAK GROUP, INC.

3400 Tree Court Industrial Blvd. St. Louis, MO 63122
(800) 325-9504 or (636) 225-9400 Fax (800) 551-5145 or (636) 225-2049
www.greenstreak.com